


INSTALLATION GUIDE

IS-34

Eccentric Adjuster Installation

1. Remove control arm as per workshop manual
2. Remove rubber bushings from control arm, inspect arm for any damage.
3. Install urethane bushings and lubricate internal bore, install eccentric tube.
4. Refit control arms and install knurled bolts by gently taping the head until the knurling bites the eccentric
5. Screw on flange nut (refer to diagram) and tighten, drawing the knurled bolt till the bolt head is flush with the clevis
6. Discard flange nut and install cone lock nut (refer to diagram)
7. Set camber or caster to required readings and then tighten nyloc nut to 95-105Nm

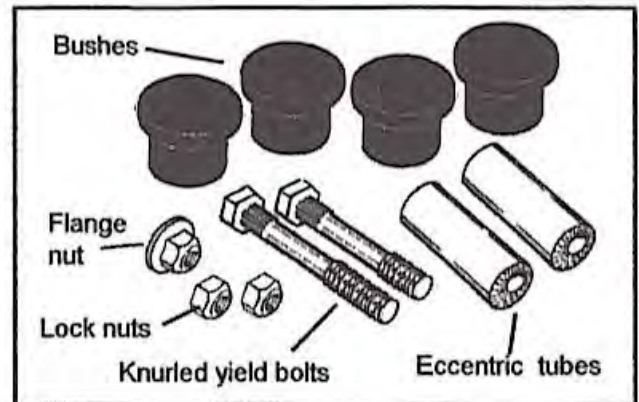

This procedure must be carried out by a qualified person