

Installation Instructions for WRX Front Strut Bar - KSB554

Step 1.

Remove the bolts from both the strut tops.



Step 2.


Remove the nut that holds the A/C line to the bracket on the drivers side of the fire wall.



///Mofugas Motorsports

Step 3.

You'll have to pull the A/C line away from the fire wall a little to snake the strut bar in. Especially on the passenger side.

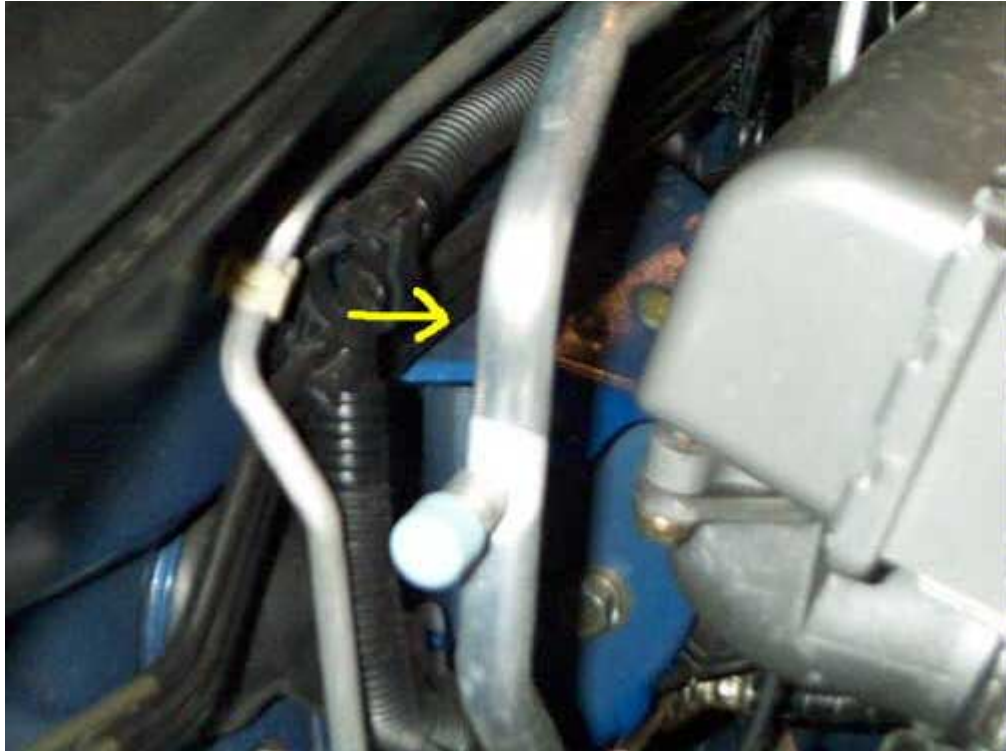

Step 4.

Turn the bar on its side and slide it between the A/C line and the fire wall. It's a tight fit and you may scratch your bar. To avoid this, try putting tape on the bar in those tight areas.




PO Box 930715, Wixom, Michigan 48393 - USA
Tel: (248) 672-6954, Fax: (517) 546-5691, Email: info@mofugas.com

www.mofugas.com

///Mofugas Motorsports

Step 5.

As you guide the bar in on the drivers side, you need to rotate the bar around the A/C line bracket to avoid scratching.

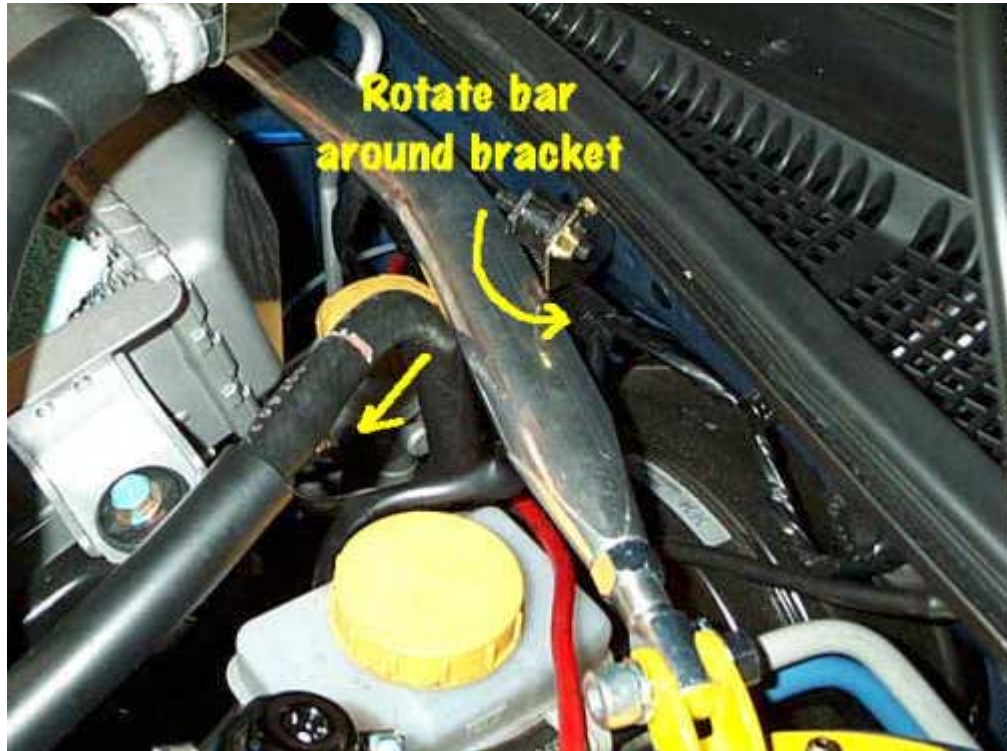

Step 6.

Put all the nuts back, your done!

Here are some pictures of how it should look once installed



PO Box 930715, Wixom, Michigan 48393 - USA
Tel: (248) 672-6954, Fax: (517) 546-5691, Email: info@mofugas.com

www.mofugas.com



PO Box 930715, Wixom, Michigan 48393 - USA
Tel: (248) 672-6954, Fax: (517) 546-5691, Email: info@mofugas.com

www.mofugas.com

///Mofugas Motorsports

TIPS:

There are a few spots where the bar is touching a few other items. To avoid scratching and wear, we recommend the use of foam, rubber tubing, or tape in between the components.

Here are some pictures of some potential "rub" spots.



If you have any questions or comments, please contact us!

PO Box 930715, Wixom, Michigan 48393 - USA
Tel: (248) 672-6954, Fax: (517) 546-5691, Email: info@mofugas.com

www.mofugas.com