


**Upper Control Arm Bushings to suit R32 Skyline, Z32 300ZX & Fairlady**

The original metal arm is stamped with the letter "A" which denotes the outer point of the arm or the end nearest the wheel.

Press 2 of the bushes branded 1219 into this end. Press each bush in as far as the swaging marks on the outer shell (see image below). Lubricate the end faces of the bush and the internal bores and fit the 110mm crush tube through the two bushes.

Press 1 bush branded 1219 and 1 bush branded 1220 into the inner end of the arm. Press each bush in as far as the swaging marks on the outer shell (see image below). Lubricate the end faces and the internal bore of both bushes and fit the 112mm crush tube through the two bushes. The 1220 bush which is longer than the 1219 is used to maintain the factory camber settings.

Kit contents: 6 x 1219 bush, 2 x 1220 bush, 2 x 110mm crush tube, 2 x 112mm crush tube, grease

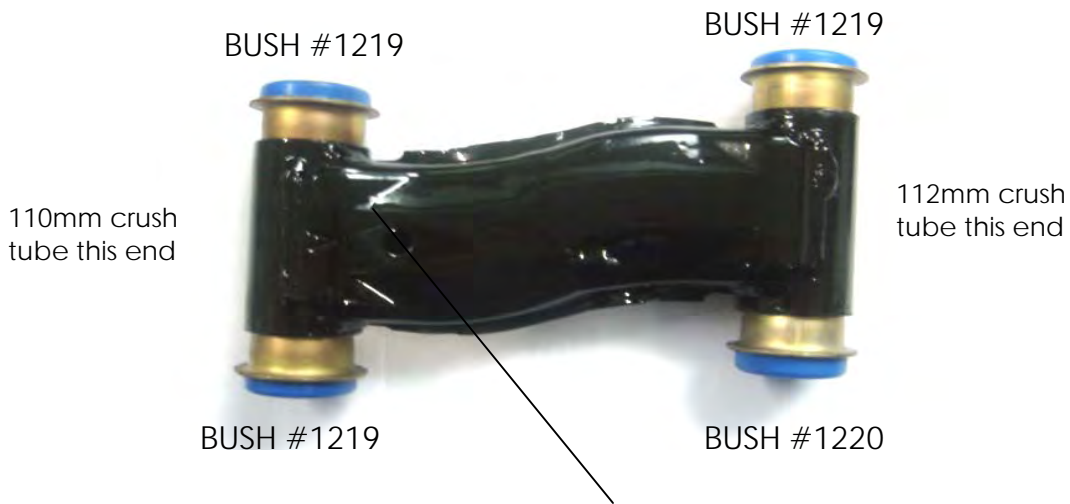

"A" denotes the outer point of the control arm or the end nearest the wheel.



Press the bushes in as far as this swaging mark

This procedure must be carried out by a qualified person