

Installation Guide

Front Control Arm Vertical Mount Bushing

Suits :Hyundai i30


(Always refer to the current catalogue for complete application listings).

N.B.This install guide should be used in conjunction with the workshop manual.

NOTE: BUSHING IS OF DIFFERENT THICKNESS EITHER SIDE OF SHELL

PRESS BUSHING IN EYELET WITH LARGER SIDE POINTING DOWNWARDS IN VEHICLE.
BUSHING VOIDING TO BE AS PER BELOW.

REFER IMAGES BELOW FOR OFFSET BUSHINGS

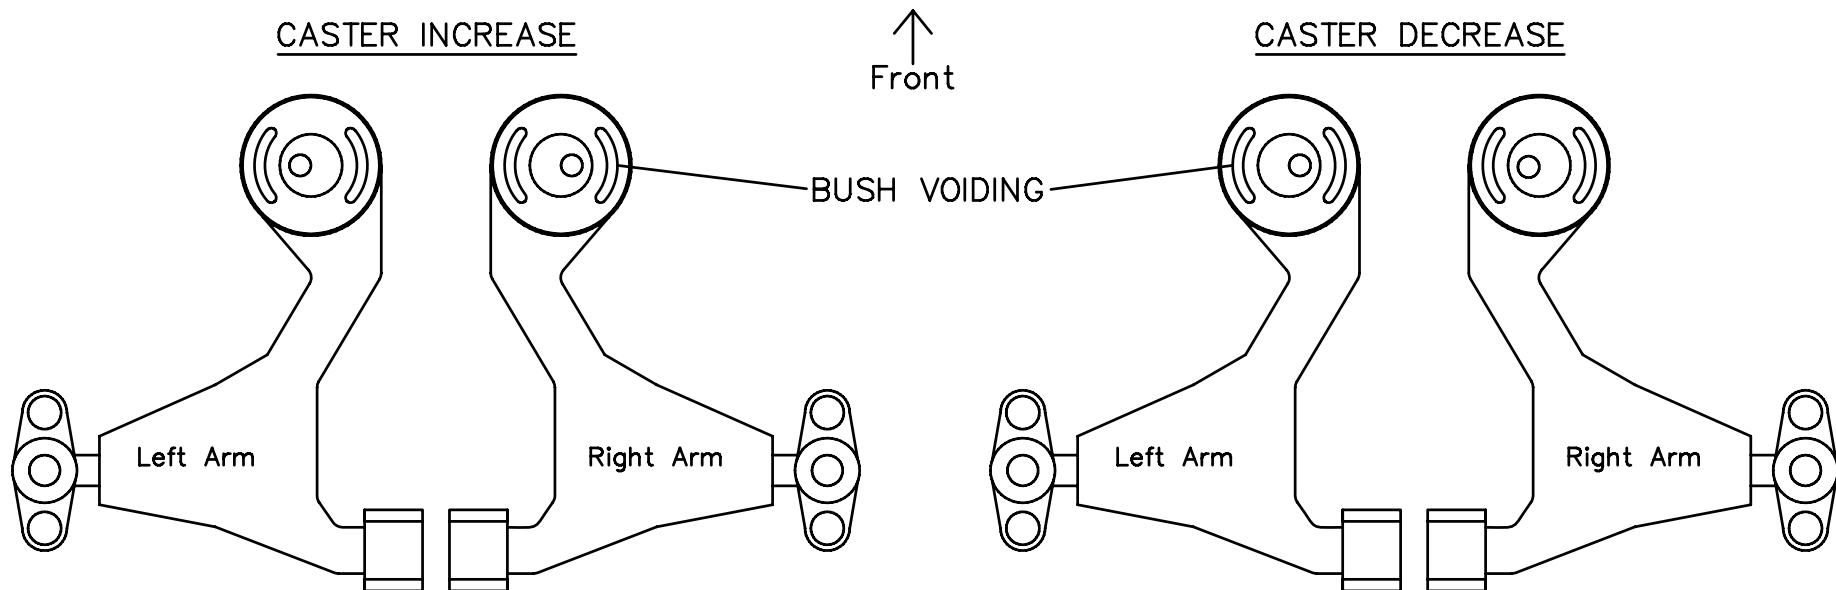

N.B. It is recommended that a licenced workshop or trades person carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.