

Instruction Sheet

Front Radius Arm Bushing

Z5322

Contents:

- 4 x 2-piece bushings.
- 2 x crush control tubes.
- 4 x washers.
- 1 x grease.

Application:

Ford Falcon FG series.

N.B: This instruction sheet should be used in conjunction with the workshop manual.



Fig 1.

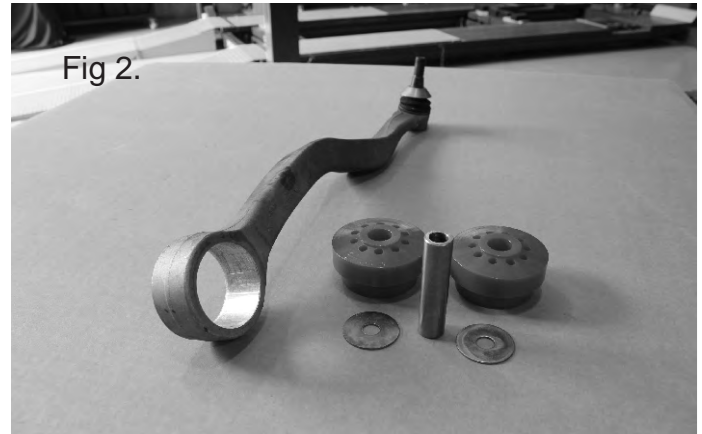


Fig 2.

1. Raise vehicle evenly and safely support.
2. Remove the front wheels and proceed to un-bolt the front arm - refer Fig1.
3. Using a suitable press, press out the original busing. Be careful not to mark the aluminium arm.
4. Make sure eye-ring is clean ready for the replacement units - refer Fig 2.

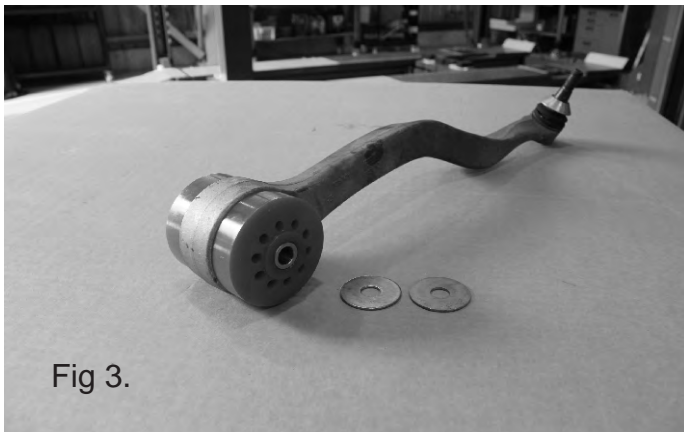


Fig 3.



Fig 4.

Supplied washers
fitted here (inside clevis).

5. Install the new bushings into the arm as per Fig 3. Then grease the bushing ID and face with the supplied grease - the proceed to push the CC tube in position.
6. Install arm into vehicle (check clevis is clean prior). please note, washers supplied are to be positioned between the arm and clevis - refer Fig 4.
7. Tighten all nuts and bolts - re-check after road test.

N.B: It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.