

Installation Instruction Sheet

KSB522

Application: Toyota Celica ZT231, front strut tower brace. Refer catalogue for exact listings.

Contents:


- 1 complete strut tower brace assembly.
- Pack of 6 x M8 flange nuts and 6 x aluminium spacers 5mm thick.

General fitting instructions:

- Remove 3 strut top mount nuts on each side.
- Adjust strut brace length to suit.
- o Special instructions: place aluminium spacers provided around strut top mount studs to raise the strut brace bracket above the strut tower. Refer picture.
 - Fit strut tower brace in position onto strut towers on top of spacers.
- Tighten using new flange nuts supplied. Discard original nuts.
- Tighten all fittings.

NOTE; Strut tower brace is to be fitted with the vehicle in normal ride position, i.e. on level ground resting on road wheels. Adjustment provided is to be used for ease of fitment. DO NOT use the adjustment to preload the strut brace.

Tighten all mounting hardware to manufacturers specification.

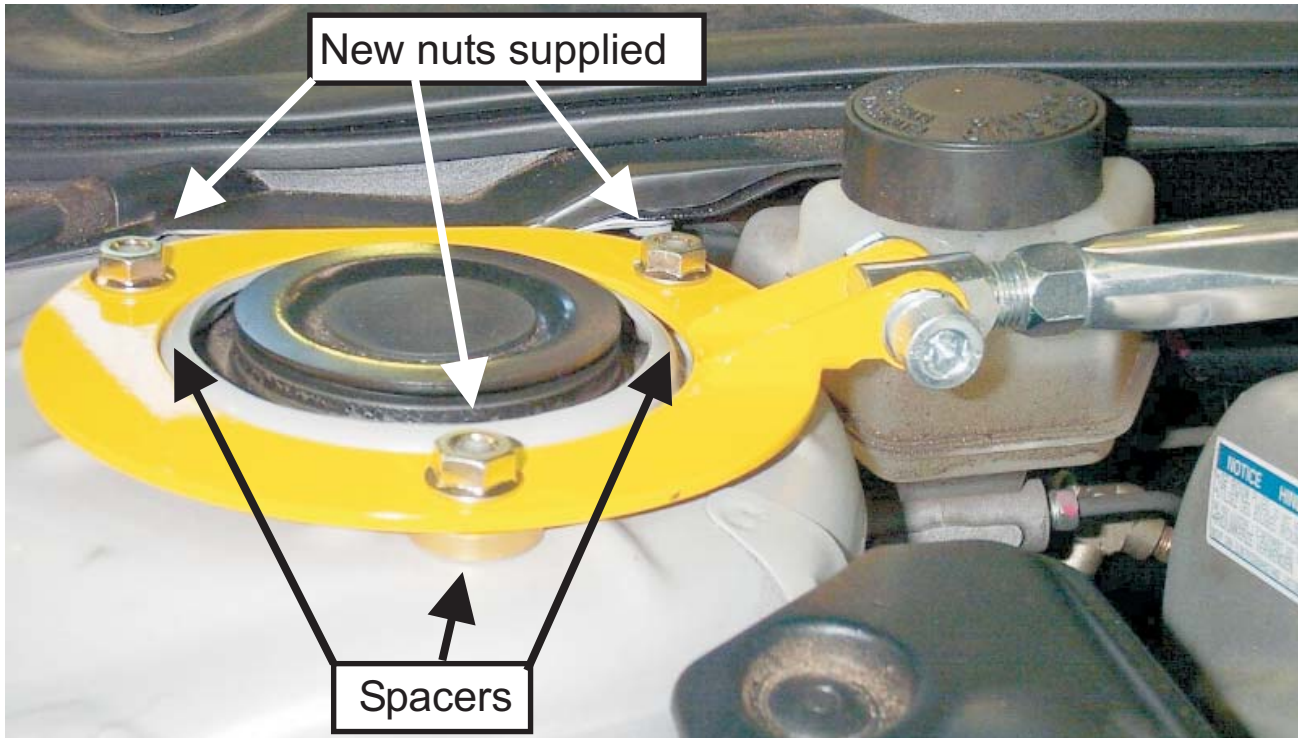

Note: Please drive carefully while you accustom yourself to the changed vehicle behaviour.

WHITELINE
Flat out
PO Box 5666, Minto, NSW, 2566 Australia
Ph: 61 2 9603 0111 Fax: 61 2 9820 2500
E-mail: admin@whiteline.com.au
A.B.N. 93 051 207 535
Code: 225