

Fitting instructions for KLC26

WHITELINE
PO Box 5666, Minto, NSW, 2566 Australia
Ph: 61 2 9603 0111 Fax: 61 2 9820 2500
E-mail: admin@whiteline.com.au
A.B.N. 93 051 207 535

Flat out
Code: Z238

Application:

KLC26 performance low compliance sway bar link kit is designed to replace the high compliance original equipment versions on most Impreza, Liberty (Legacy) and WRX. The kit utilises a high tensile extruded alloy link fitted with ultra low compliance polyurethane bushes. Critical hardware is replaced with high tensile components to match the higher loads.

The result is much more precise and direct roll control with up to 25% more effective bar rate available at lower wheel deflection points. This does NOT mean an outright increase in your bar rate but rather a quickening of its effect allowing more bar rate earlier. Link shape and bush mounts are designed to allow maximum swaybar articulation to ensure full suspension travel while acting more directly under vertical load. Standard length maintains correct swaybar operation.


Contents:

KLC26 kit contains the following hardware parts;

- o 4 * M10 * 60mm 1.5 G8.8 bolts
- o 4 * M10 * 1.5 Nyloc nuts
- o 2 * M10 * 32mm washer (large)
- o 6 * M10 * 22mm washer (small)
- o 2 * extruded alloy link/bush assemblies

Fitting:

- o To fit, first raise and support the vehicle on a level surface with the wheels at normal ride height. That is, DO NOT raise the body alone.
- o Then replace the original links and hardware with the new components supplied in the kit as per the drawings below.
- o Check and retention all fittings after an appropriate settling in period but within 100kms of fitment.

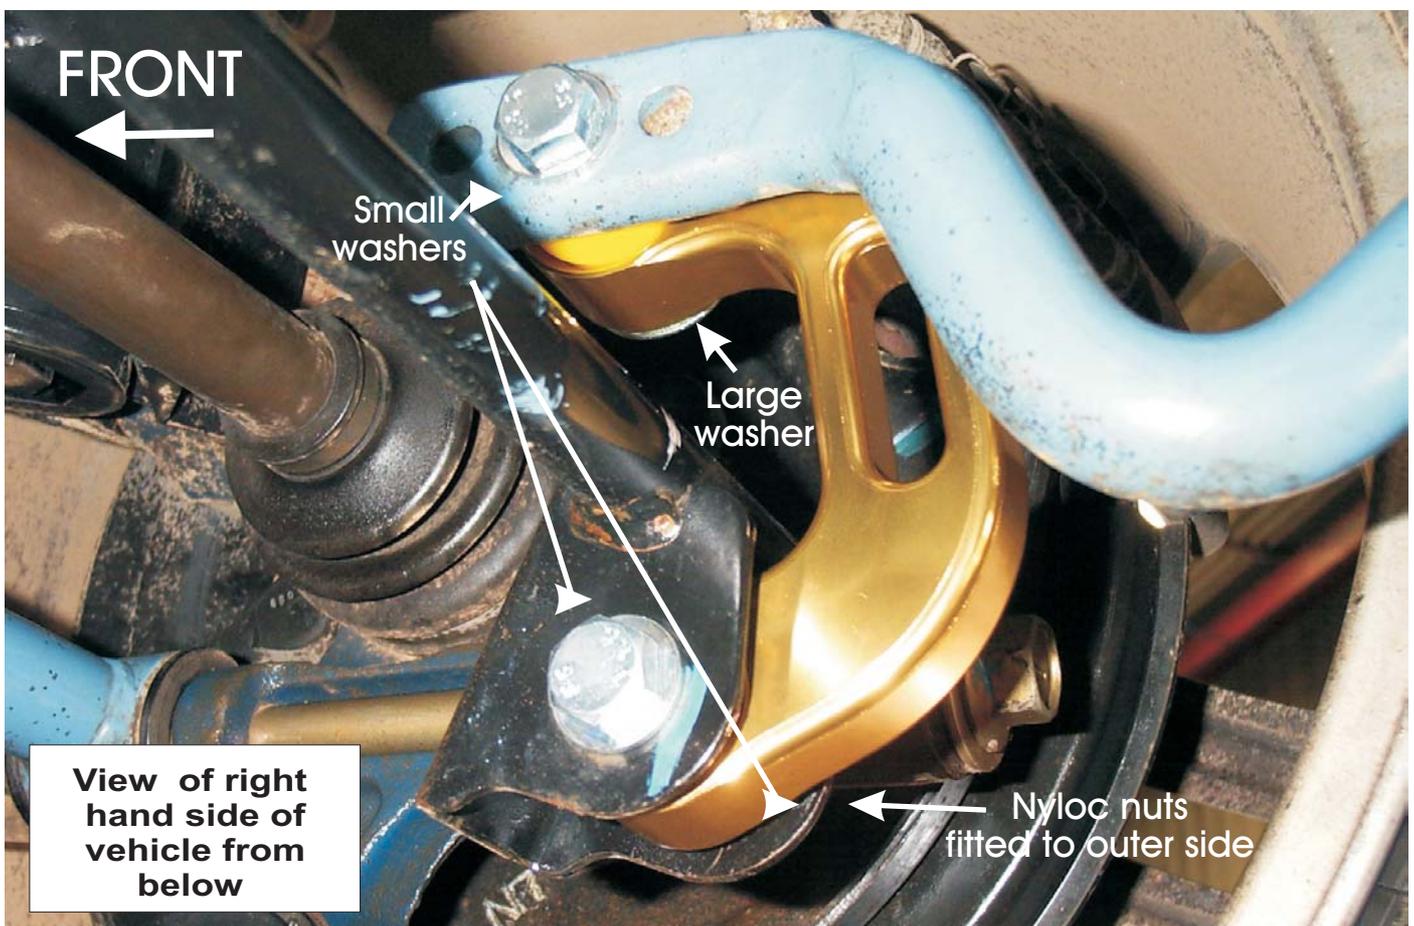

Warning: Please drive carefully while you accustom yourself to the changed vehicle behaviour.