


# Draft Fitting Instructions W0564

## Application:

For ease of installation and correct positioning of Polyurethane bushes:

1. Remove rubber bush and clean all traces of rubber from the housing.
2. Grease the inside of the bush housing, grease the outside of the bush and then press the bush into the housing.
3. Grease the inside of the bush grease the outside of the crush tube then press crush tube into bush.
4. Grease each end of the bush and the mating metal components.

## Fitting:

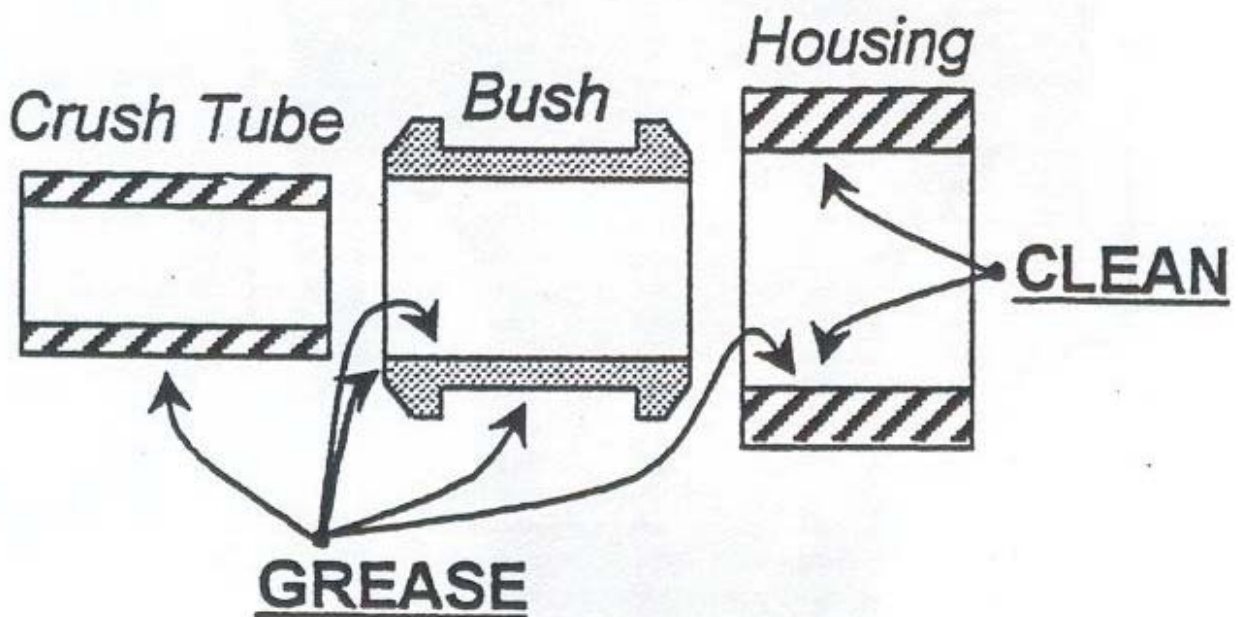

**Warning:** Please drive carefully while you accustom yourself to the changed vehicle behaviour.