

Fitting Instructions

BHR79 / BHR79Z

WHITELINE

PO Box 5666, Minto, NSW, 2566 Australia
Ph: 61 2 9603 0111 Fax: 61 2 9820 2500
E-mail: admin@whiteline.com.au
A.B.N. 68 073 002 034

Flat out

Code: Z271

Application:

Holden Crewman VY 2003-2005.
(without OEM rear swaybar).
(Refer catalogue for exact listing)

Specification:

BHR79 - Ø18mm non-adjustable full kit swaybar.
BHR79Z - Ø18mm 3-way adjustable full kit swaybar.

Contents:

- | | | |
|-----|-----|---------------------------------|
| 1. | 2 x | D-bush |
| 2. | 4 x | M8 * 25mm long bolt. |
| 3. | 4 x | M10 * 60mm long bolt. |
| 4. | 4 x | M8 flange nut. |
| 5. | 4 x | M10 nyloc nut. |
| 6. | 4 x | 3/8*1-1/4 flat washer - large. |
| 7. | 4 x | 3/8 * 7/8 flat washer - medium. |
| 8. | 4 x | 5/16 flat washer - small. |
| 9. | 2 x | double eye link |
| 10. | 2 x | D-bush bracket |
| 12. | 1 x | grease bag |
| 13. | 1 x | swaybar |




Fitting instructions:

Please read complete fitting instructions and check kit components before proceeding with installation. Swaybar installation must be done with the vehicle at normal ride height, however a drive-on ramp/hoist can be used for easier access to the undercarriage.

1. Locate swaybar mounting brackets on either side of the axle.
2. Disconnect rear brake line brackets off the axle swaybar mounting brackets, and slightly move the brake line away from the axle.
3. On the axle swaybar mounting brackets, mark and drill Ø9mm hole, 6mm down from the top of the bracket.
4. Lubricate bushes with grease supplied and fit to the swaybar.
5. Using new bushes, bush brackets and bolts, mount the swaybar to the axle.
6. Locate swaybar link chassis mount brackets behind the axle, and attach new links to the inside of the chassis and the outside of the swaybar.

For adjustable swaybars, refer to rate adjustment guide.

7. Re-attach brake lines to the axle.
8. Tighten all hardware.
9. Recheck and tighten all fittings after initial 500kms.

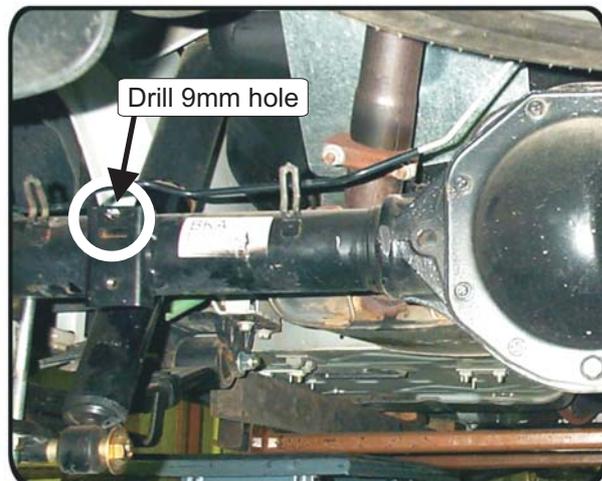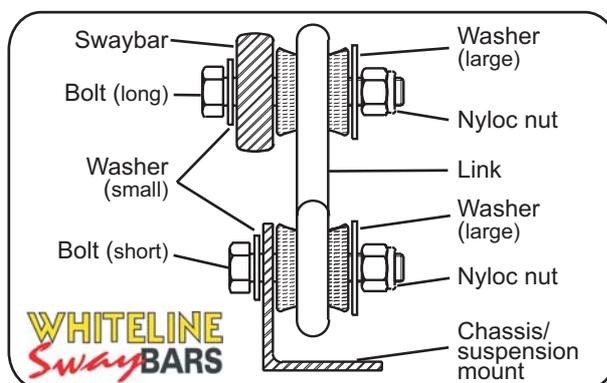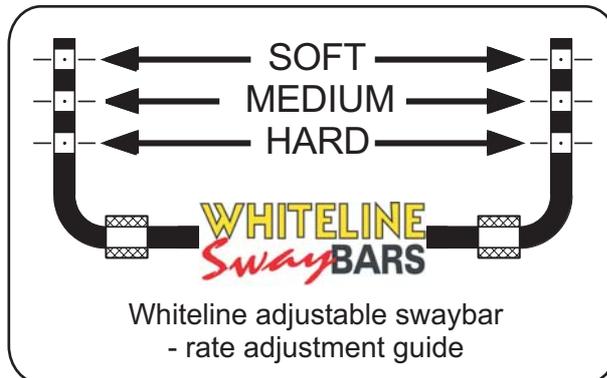

Warning: Please drive carefully while you accustom yourself to the changed vehicle behaviour.