

# Fitting Instructions

## KLC010

# WHITELINE

AUTOMOTIVE  
PO Box 5666, Minto, NSW, 2566 Australia  
Ph: 61 2 9603 0111 Fax: 61 2 9820 2500  
E-mail: admin@whiteline.com.au  
A.B.N. 68 073 002 034

*Flat out*

Code: Z347

### Application:

**KLC010** is a spherical rod-end adjustable front swaybar link kit to suit Nissan 350Z (Z33 chassis).

Always refer to current catalogue for complete application listing.

This is a high performance, high misalignment link kit utilising ultra low compliance spherical rod-ends.

### Contents:

- 4 x spherical rod-ends - M10 (2 x LH + 2 x RH thread)
- 2 x centre left/right-hand turn buckles (40mm length)
- 4 x lock nuts (LH + RH thread)
- 8 x rod-end seal
- 2 x bolt - M10 \* 60mm high tensile
- 2 x bolt - M10 \* 70mm high tensile
- 4 x nut - M10 nyloc
- 4 x washer, flat
- 8 x spacer - stepped 12mm to 10mm
- 2 x spacer - 6mm
- 4 x spacer - 9mm

### Fitting instructions:

Please read complete fitting instructions and check kit components prior to fitment. Initial installation may be done with the vehicle raised off the ground and wheels removed for better access. However, link adjustment and tightening must be done with the vehicle at normal ride height.

**Note: It is recommended to apply thread locking compound to all threads.**

1. Raise front of the vehicle, support on chassis safety stands, and remove wheels.
2. Remove original swaybar links.
3. Assemble new links, as shown in photo 2.
4. Adjust the length of the link assembly equivalent to the OEM link.
5. Attach complete link assemblies to both lower control arms using 1 x 6mm, 1 x 9mm & 2 x stepped spacers per link, as shown in photo.3. Tighten using new nyloc nuts.
6. Loosely connect both link assemblies to the swaybar using 1 x 9mm & 2 x stepped spacer per link as shown in photo.1.
7. Refit wheels, and lower the vehicle. Installation must be continued with the vehicle at normal ride height. Do not drive at this stage.

*It is critical that the car is parked on level surface to avoid swaybar pre-load.*

8. Tighten lock nuts and all mounting hardware on one side (link) only.  
*Rod ends must be in the centre of their axis in the housing to prevent binding.*
9. Adjust the length of the second link to remove swaybar pre-load.  
*Rod ends must be in the centre of their axis in the housing to prevent binding.*
10. Tighten all mounting hardware.

**Note: Link rod end threads MUST be engaged by at least 10-12 mm. Do not adjust the length out beyond this point. As a guide this link has an adjustment range between 90 and 110mm centre-to-centre.**

**Failure to maintain adequate thread engagement may result in premature component failure.**

When using these links as a replacement to OE bushed link, self-centering of the swaybar may be reduced and it is recommended to use W0450-(size) swaybar lateral lock kit to prevent swaybar movement.

It is very important that the link assembly is carefully checked for adequate range of link articulation and rotation *before* driving to make sure there is no binding. Wheels should be moved through their entire operating range to check for binding of the links or swaybar *before* driving.

Though designed for a long, silent life, all spherical bearings are affected by dirt, water and high loads (motorsport). Some noise may develop after prolonged heavy use but this is relatively normal and does not automatically imply component failure. Noisy operation should prompt inspection with components replaced if showing excessive play.

**Warning: Please drive carefully while you accustom yourself to the changed vehicle behaviour.**

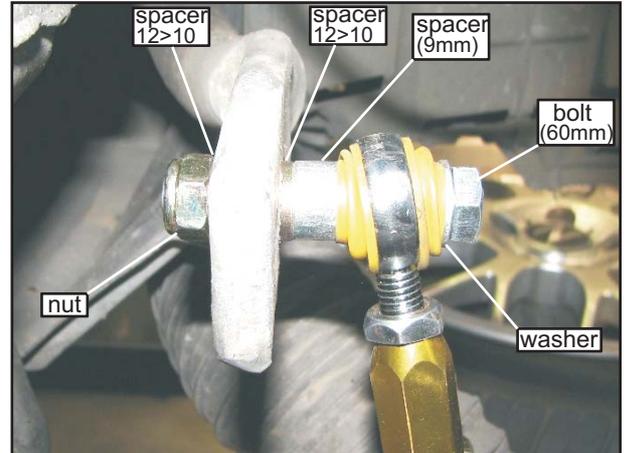


Photo 1.



Photo 2.

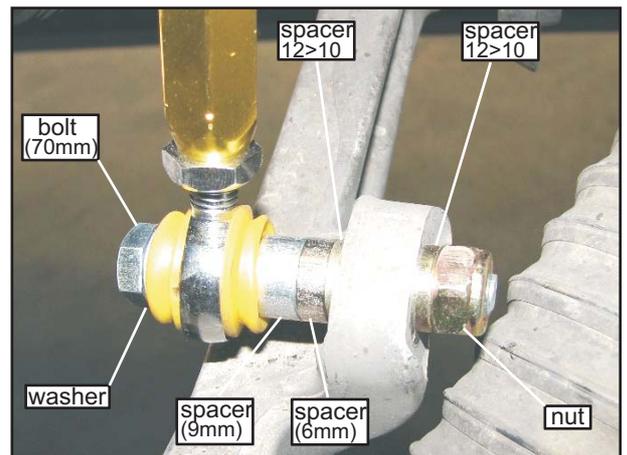


Photo 3.