

Fitting Instructions

KLC060

KLC061.

WHITELINE

AUTOMOTIVE *Flat out*

PO Box 5666, Minto, NSW, 2566 Australia
 Ph: 61 2 9603 0111 Fax: 61 2 9820 2500
 E-mail: admin@whiteline.com.au
 A.B.N. 68 073 002 034

Code: Z358

Application:

The above parts are spherical rod-end adjustable swaybar link kits to suit the following vehicle:

Nissan Patrol GU, rear swaybar.

KLC060 - Suit 50mm suspension lift.

KLC061 - Suit 100mm suspension lift.

This is a high performance, high misalignment link kit utilising ultra low compliance spherical rod-ends, allowing original swaybar angles when the vehicle is fitted with varying suspension lift kits.

The result is much more precise and direct roll control, negligible rotational resistance with no binding.

Contents:

- 4 x spherical rod-ends - M10 (LH + RH thread)
- 2 x centre left/right-hand turn buckles (1 x long, 1 x short)
- 4 x lock nuts (LH + RH thread)
- 8 x rod-end seal
- 1 x M10 * 40mm bolt, high tensile
- 1 x M10 * 55mm bolt, high tensile
- 2 x M10 * 60mm bolt, high tensile
- 5 x M10 nyloc nut
- 6 x flat washer
- 1 x spacer - stepped 16mm to 10mm
- 6 x spacer - 6mm
- 1 x link bracket, U-shape with stud

Fitting instructions:

Please read complete fitting instructions and check kit components prior to fitment. Initial installation may be done with the vehicle raised off the ground and wheels removed for better access. However, link adjustment and tightening must be done with the vehicle at normal ride height.

Note: It is recommended to apply thread locking compound to all threads.

1. Raise rear of the vehicle, support on chassis safety stands and remove wheels.
2. Remove original swaybar links.
3. Assemble new links, as shown in photo 3 & 4.
4. Attach new link bracket (with stud) to upper end of drivers side link using 40mm bolt and nut.
5. Attach complete drivers side link assembly to chassis using 16>10mm spacer on upper side of the chassis bracket, with the step providing location. Tighten using new nyloc nuts. Refer photo's 1, 2 & 3.
6. Attach complete passengers side link assembly to chassis using 2 x 6mm spacers, 55mm bolt, washers & nut. refer photo's 4 & 5.
6. Using new hardware & 6mm spacers, connect both links to the swaybar. Refer photo's 2 & 6.
7. Refit wheels, and lower the vehicle. Installation must be continued with the vehicle at normal ride height. Do not drive at this stage.
It is critical that the car is parked on level surface to avoid swaybar pre-load.
8. Tighten lock nuts and all mounting hardware on one side (link) only.
Rod ends must be in the centre of their axis in the housing to prevent binding.
9. Adjust the length of the second link to remove swaybar pre-load.
Rod ends must be in the centre of their axis in the housing to prevent binding.
10. Tighten all mounting hardware.

Note: Link rod end threads MUST be engaged by at least 10-12 mm. Do not adjust the length out beyond this point. Failure to maintain adequate thread engagement may result in premature component failure.

When using these links as a replacement to OE bushed link, self-centering of the swaybar may be reduced and it is recommended to use W0450-(size) swaybar lateral lock kit to prevent swaybar movement.

It is very important that the link assembly is carefully checked for adequate range of link articulation and rotation *before* driving to make sure there is no binding. Wheels should be moved through their entire operating range to check for binding of the links or swaybar *before* driving.

Though designed for a long, silent life, all spherical bearings are affected by dirt, water and high loads (motorsport). Some noise may develop after prolonged heavy use but this is relatively normal and does not automatically imply component failure. Noisy operation should prompt inspection with components replaced if showing excessive play.

Warning: Please drive carefully while you accustom yourself to the changed vehicle behaviour.

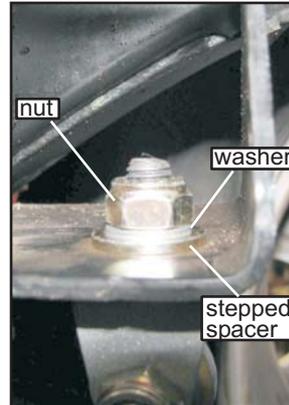


Photo 1. drivers side upper

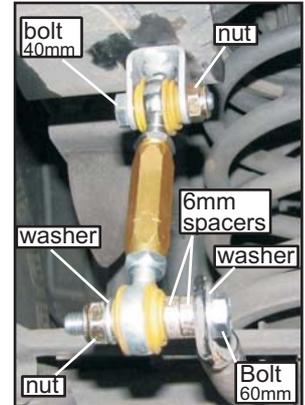


Photo 2. drivers side front view



Photo 3. drivers side assembly side view



Photo 4. passengers side assembly side view



Photo 5. passengers side upper

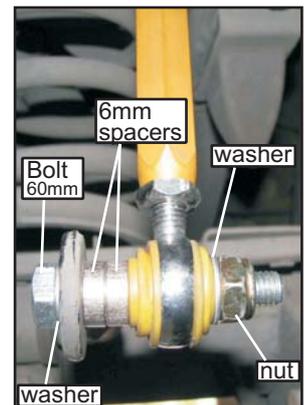


Photo 6. passengers side lower