

# Fitting Instructions

## BTR21Z

# WHITELINE

A U T O M O T I V E

PO Box 5666, Minto, NSW, 2566 Australia  
Ph: 61 2 9603 0111 Fax: 61 2 9820 2500  
E-mail: admin@whiteline.com.au  
A.B.N. 68 073 002 034

*Flat out*

Code: Z367

### Application:

Full kit rear swaybar to suit:  
Toyota Supra MA60 Series, 1983 - 1986.  
*Always refer to current catalogue for complete application listing.*

### Specifications:

BTR21Z - 18mm adjustable full kit swaybar

### Contents:

- 1 x swaybar
- 2 x swaybar mount bushes
- 2 x 'L' shaped control arm to endlink brackets, 2-hole
- 2 x swaybar links (with bushes and crush tubes)
- 2 x 3/8" \* 1.75 inch bolts (short)
- 2 x 3/8" \* 2.0 inch bolts (long)
- 4 x 3/8" nyloc nuts
- 2 x M12 nyloc nuts
- 4 x 3/8" flat washers (small)
- 4 x 3/8" flat washers (large)
- 2 x 1/2" flat washers
- 1 x grease bag

### Fitting Instructions:

Please read complete fitting instructions and check kit components prior to fitment. Whiteline recommends that all work be carried out by a qualified technician. Installation of this product is best done with the vehicle on a hoist / lift.

1. Remove rear swaybar endlinks, undo swaybar chassis mounting bolts, and remove swaybar.
2. Using 1/2" washer and M12 nyloc nut, install new L-shaped bracket to the original link attaching point, as shown in photos 1 & 2.
3. Apply grease supplied to the inside of poly D-bushes, and fit onto the swaybar.
4. Using original bolts and saddles, attach the swaybar to the chassis.
5. Using new bolts, washers and links, connect the swaybar to the link brackets, as shown in photo 3 and figure 2. Refer to figure 1 for swaybar adjustment guide.
6. Tighten all nuts and bolts.
7. Check & re-tension all fittings again after 100km's but no more than 200km's.

For noise and friction free operation, carry out periodic inspections and maintain proper bush lubrication.

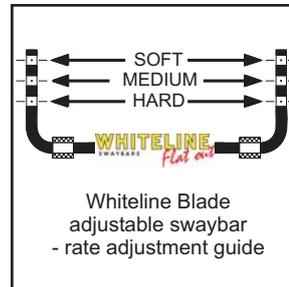


Figure 1.

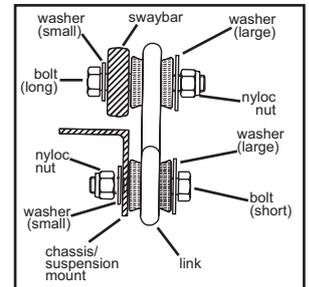


Figure 2



Photo 1



Photo 2



Photo 3. Right-hand side view.



Photo 4. BTR21Z complete assembly

**Warning:** Please drive carefully while you accustom yourself to the changed vehicle behaviour.