

# Fitting Instructions KBR16

# WHITELINE

AUTOMOTIVE *Flat out*

PO Box 5666, Minto, NSW, 2566 Australia  
Ph: 61 2 9603 0111 Fax: 61 2 9820 2500  
E-mail: admin@whiteline.com.au  
A.B.N. 68 073 002 034

Code: Z374

## Application:

Rear swaybar link support bracket kit to suit:  
Subaru Forester SG 6/02-06 - all models

*Always refer to current catalogue for complete application listing.*

KBR16 is a bolt-on bracket kit designed to support and strengthen the original link control arm bracket. It is recommended for all swaybars and critical on uprated aftermarket swaybars.

## Contents:

- 2 x link support brackets
- 2 x U-bolts
- 4 x nyloc nuts

## Fitting Instructions:

Please read complete fitting instructions and check kit components prior to fitment. Installation of this product must be done with the vehicle at normal ride height. To enable better access to the undercarriage, drive-on ramps can be used.

1. Undo rear endlink to control arm retaining nut.
2. With the isingale hole face of the link support bracket positioned vertically, slide the link support bracket over the original link bolt and refit original nut.
3. Fit the U-bolt from the bottom of the bracket around the control arm, and loosely secure with nyloc nuts.
4. With the link support bracket in place and centrally located, tighten all nuts.



Photo 1. KBR16 inside view.

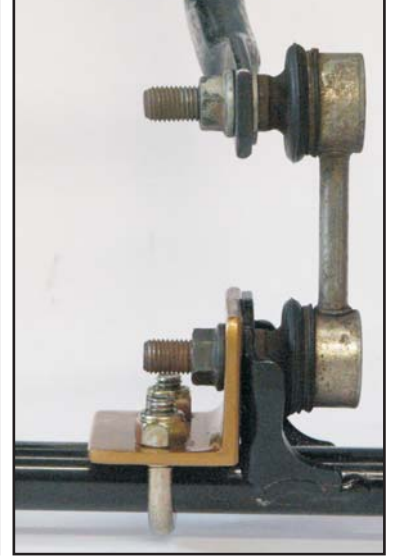


Photo 2. KBR16 front view.

Photo 2. KBR16 front view.

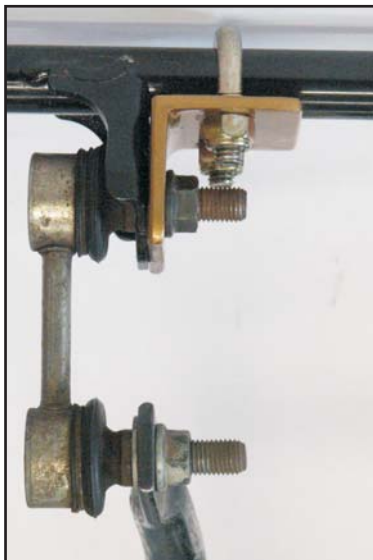


Photo 1. KBR16 inside view.



1. Undo rear endlink to control arm retaining nut.
  2. With the isingale hole face of the link support bracket positioned vertically, slide the link support bracket over the original link bolt and refit original nut.
  3. Fit the U-bolt from the bottom of the bracket around the control arm, and loosely secure with nyloc nuts.
  4. With the link support bracket in place and centrally located, tighten all nuts.
- Please read complete fitting instructions and check kit components prior to fitment. Installation of this product must be done with the vehicle at normal ride height. To enable better access to the undercarriage, drive-on ramps can be used.

## Fitting Instructions:

- ### Contents:
- 2 x link support brackets
  - 2 x U-bolts
  - 4 x nyloc nuts

Rear swaybar link support bracket kit to suit:  
Subaru Forester SG 6/02-06 - all models  
*Always refer to current catalogue for complete application listing.*

## Application:

KBR16 is a bolt-on bracket kit designed to support and strengthen the original link control arm bracket. It is recommended for all swaybars and critical on uprated aftermarket swaybars.

Code: Z374

PO Box 5666, Minto, NSW, 2566 Australia  
Ph: 61 2 9603 0111 Fax: 61 2 9820 2500  
E-mail: admin@whiteline.com.au  
A.B.N. 68 073 002 034

# WHITELINE

AUTOMOTIVE *Flat out*

# Fitting Instructions KBR16