


Lower Wishbone (Control Arm) Inner

1. Support the vehicle and disconnect the ball joint, radius rod and sway bar link
2. Remove the lower control arm
3. Remove old bush and shell and inspect arm for damage and cracking. Press fit new bush taking care to support the with a spacer between the eye to minimise damage to the arm.
4. Check size of camber bolt and select crush tubes to match camber bolt size. Either ½" (13mm) or 9/16" (14mm).
5. Before assembly, lubricate end faces on the bushes with the grease provided.
6. Refit end washers and tighten lock nuts after installation
7. Reassemble suspension and tighten all components according to manufacturers' specifications.
8. Carry out wheel alignment

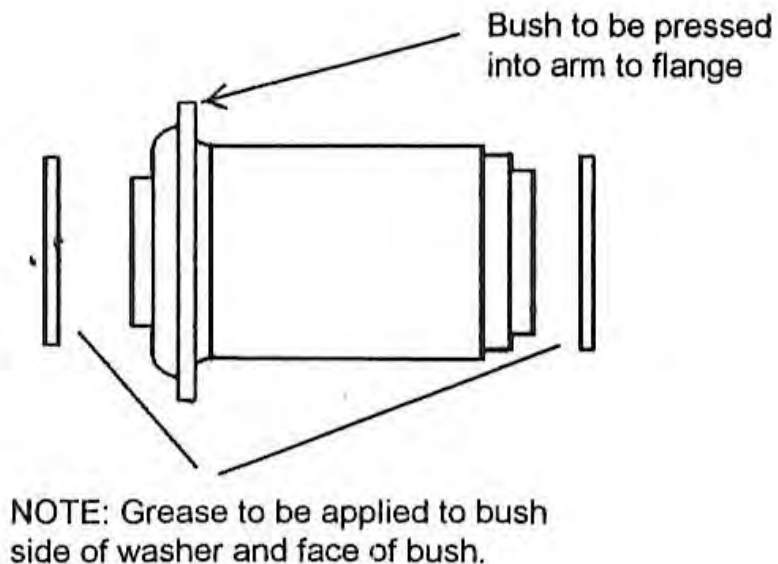

This procedure must be carried out by a qualified person