

Instruction Sheet


Front Adjustable Swaybar Link

Z5291

Suits: VW/AUDI PLATFORM

N.B: This instruction sheet should be used in conjunction with the workshop manual

1. Raise vehicle evenly and safely support.
2. Un-bolt and remove OE links.
3. Prior to fitment of the new adjustable units, confirm the ball ends are threaded in evenly at both ends of the center turn buckle.
4. Note the 4 steel spacers supplied - these are to be placed over the ball studs prior to fitment.

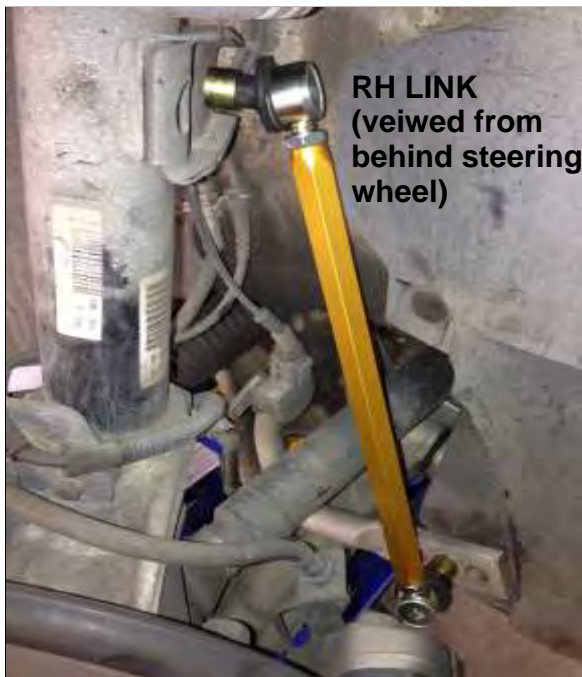

5. The RH swaybar link is to be mounted forward side of the strut as per images above.
6. Adjust the RH link length - effectively shortening so minimal thread is shown (as per above).
7. The LH swaybar link is also mounted forward of the strut as per images below.
8. Whilst the vehicle is level, peferably at ride height fine tune and remove any swaybar pre load with the LH link - a minimum of 10mm internal thread to be maintained. Tighten all lock nuts.



N.B: It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.