


INSTALLATION GUIDE

Rear Adjustable Swaybar Link

Application: Ford Focus

Adjustable swaybar links are designed to offer the ability to remove any existing pre-load - this can be actioned whilst the vehicle is at ride height.

Fig. 1

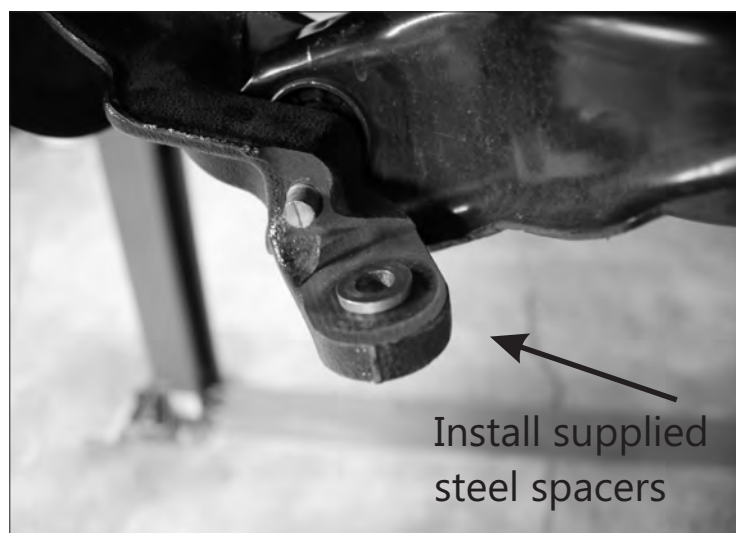

Place washers either side of blade. →

Fig. 2



Instructions

1. Raise vehicle evenly and support. Alternatively, drive up on ramps.
2. Remove the OE links.
3. Note the 2 supplied stepped spacers - place these into the hub - refer Fig. 1.
4. Proceed to bolt up links with the turn buckle loose. Confirm there is at least 10mm of thread engagement.
5. Place washers either side of the swaybar blade and 1 washer under the hub.
6. Tighten the nyloc nuts.
7. Proceed to slowly turn the turn buckle confirming there is no pre-existing tension - then tighten lock nuts.
8. Re-check all nuts after 100kms travelled.