



# Instructions Engine Steady - Torque Mount Insert

*Page 1 of 2*

**Application** - Hyundai I30  
- Hyundai Elantra

*Always refer complete catalogue listing*

**Contents** - 2x bushing inserts

**N.B:** This instruction sheet should be used in conjunction with the workshop manual and proper safety procedures followed.

WHITELINE's torque mount insert is designed to deliver a stronger gear shift with improved engine power delivery to the wheels - resulting in improved acceleration and less wheel hop.

- Raise front of vehicle evenly and safely support.
- Proceed to remove front under-car plastic tray (10mm bolts and clips).
- Remove the Torque Arm from vehicle.  
- remove the 17mm and 14mm bolts.



**N.B:** It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.




# Instructions Engine Steady - Torque Mount Insert

*Continued - Page 2 of 2*

- Proceed to un-bolt main 14mm clamp bolt and dismantle mount - refer right image.

Note - both bushing inserts are identical.

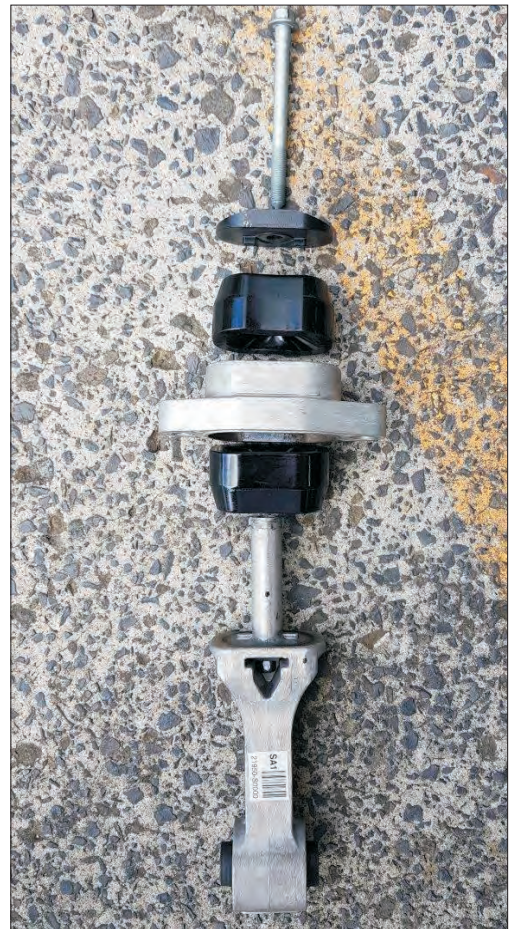

- Re-assemble mount with supplied inserts - use original bolt - tighten bolt to manufacturers spec.
- Re-fit to vehicle and road test.

N.B: It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.