

Instructions Front Control Arm Rear Bushing

N.B: This instruction sheet should be used in conjunction with the workshop manual and proper safety procedures followed.

Application - Mitsubishi EVO VII VIII IX

Always refer complete catalogue listing

Contents - Bushing 68646 x2
- Aluminium spacers x4



- Place 1 supplied spacer on top and 1 spacer on bottom side of bearing

- Proceed to press new performance bushing in aluminium arm.


- **Note RH image for bushing orientation - place offset approx 90 degrees to the dotted pivot line.**

- A wheel alignment will be requiring after install

- Raise vehicle evenly and safely support.
Never rely on a Jack only

- Proceed to remove front wheels. Followed by un-bolting front control arms.

- Using a Press and correct size Press Tools, push out original bushing including steel outer shell. - careful to not damage aluminium arm.

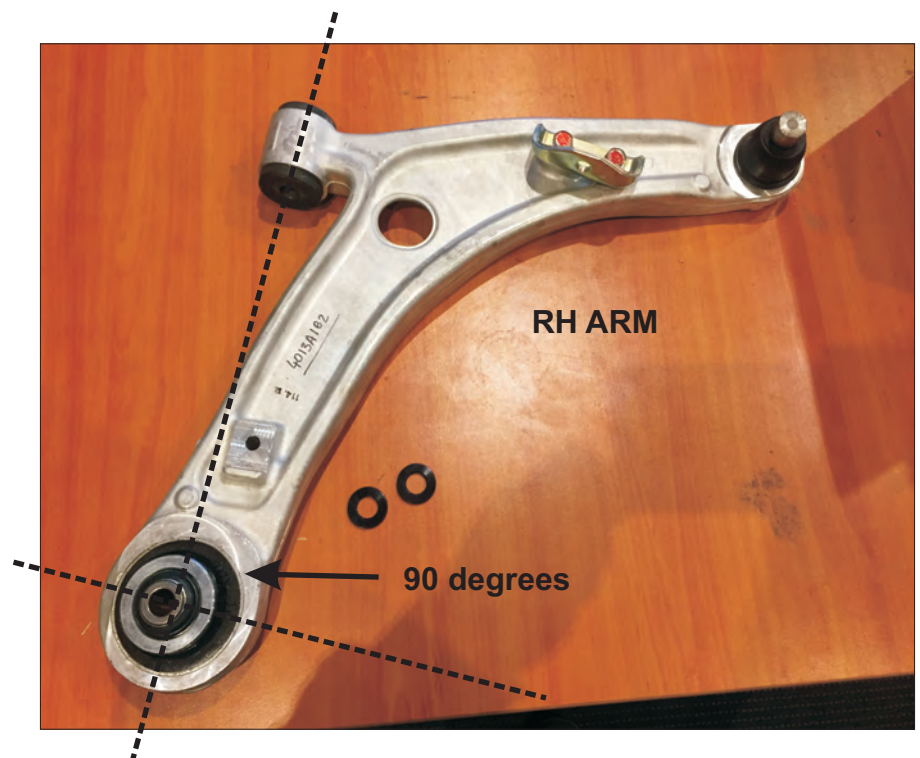

N.B: It is recommended that a licenced workshop or tradesperson carry out the above procedure and that workshop manual and relevant safety procedures are followed in addition to the above.